



Reflash LYNK Device – Prepare and Create USB drive

Items needed:

Blank USB

- Flash drive with a capacity greater than 500mb
- Windows based PC

Part 1 – Formatting the Flash Drive

1. Plug the flash drive into a USB port on a Windows PC.
2. Open My Computer/This PC and locate the flash drive in Windows.
3. Right click on the flash drive and select “Format” from the menu.
4. On the “Format USB Drive” menu, ensure that “FAT32” is selected as the “File System”.
5. Click “Start” and then click “OK” on the subsequent menu.
6. Wait for the formatting to complete and the “Format Complete” dialog to be displayed.

Part 2 – Adding the LYNK Software Update to the USB drive

7. Access the LYNK software version by following this link – [Lynk Software](#)
8. Choose correct folder (i.e., USA Vending, Canada Kiosk, etc.) per your needs.
9. Always choose “Production” as your subfolder.
10. Download, locate and extract/unzip the ZIP file.
11. Navigate to the extracted ZIP output, and locate the folder titled “vxupdate”.
12. Drag the vxupdate folder into the top level of the formatted USB Flash drive.
13. Once the copy is complete, the flash drive is ready to be used in the reflash procedure.

LYNK Support

O: 336-663-8343 x 206

E: LYNKSupport@globalconnect.biz

