



## How to: Reflash a LYNK Device (B2G Kiosk)


### Required:

- 1 USB flash drive with the latest LYNK software version installed
- 1 USB keyboard (not included in the Reflash Kit)

Scan the QR Code to order a Reflash Kit (Marketplace account required.)

### Steps:

1. Open the kiosk and unplug the USB cable (#12) from the power supply to the LYNK.
2. Plug the USB keyboard into the exposed USB port on the right side inside the kiosk.
3. Reconnect the USB cable that powers the LYNK.
4. Power on the device and monitor the “System Initializing” message until it reaches 100%. Once it reaches 100%, repeatedly hit the ESC key to access the Program Manager.
5. On the Program Manager, use the Up and Down keys to highlight the “GC\_bootloader” app
6. Hit 2 on the keyboard. “OK to Delete?” will appear on the screen. Hit Enter to delete the bootloader app.
7. Hit 2 again with “GC\_Telemeter” highlighted, then hit Enter to delete. Repeat for “Code\_N\_Go\_unatt”. The Program Manager should now be blank.
8. Locate the USB flash drive and have it ready for the next step.
9. On the keyboard, hit keys 0, then 1(download AP), then 2(USB DISK). After doing this, quickly unplug the keyboard from the USB port, and plug in the USB flash drive so that the telemeter can pull the update from the drive.
10. The update should start. Once complete, the device will reboot. This may take up to 30 minutes.
11. Monitor the screen until the “System Initializing” message appears then unplug the flash drive. The Reflash is complete.

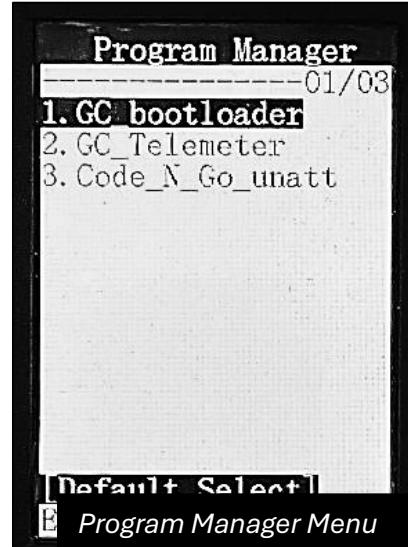

P: (336) 645-9629, E: [LYNKSsupport@globalconnect.biz](mailto:LYNKSsupport@globalconnect.biz)



Scan to order a Reflash Kit